


Wiring of Main Circuit Terminal and Grounding Terminal

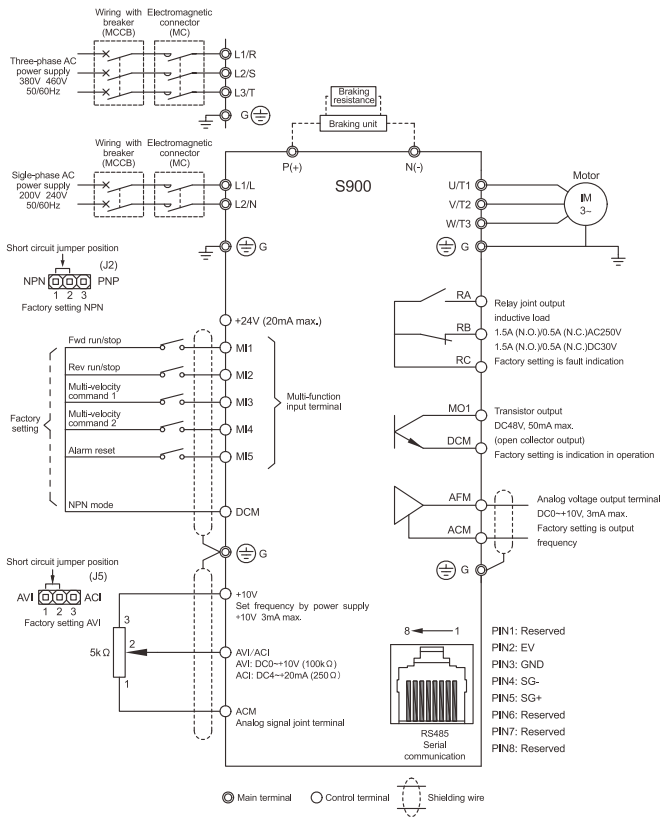

Note: RS485 may damage the terminal of connector side. So the terminal configuration has to be confirmed before connection. The used signal wire can be cut if necessary.