


Basic Wiring Diagram

Servo Motor & Drive Wiring Diagram

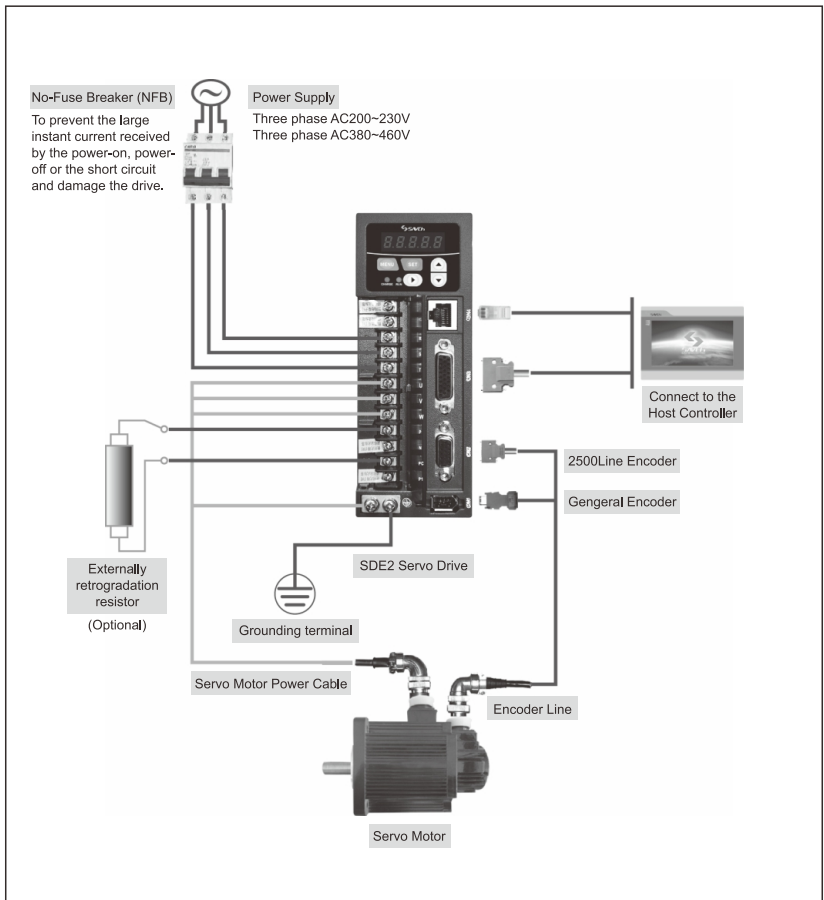

Installation Notes:

1. Check the R, S, T power and connecting wire.
2. Check the servo motor output U, V, W terminal phase wires (Unable to run when the connection is wrong).
3. External connected regeneration resistor is the selective spare, adopt according to the actual needs.