Basic Wring Diagram

Servo Motor & Drive Wiring Diagram

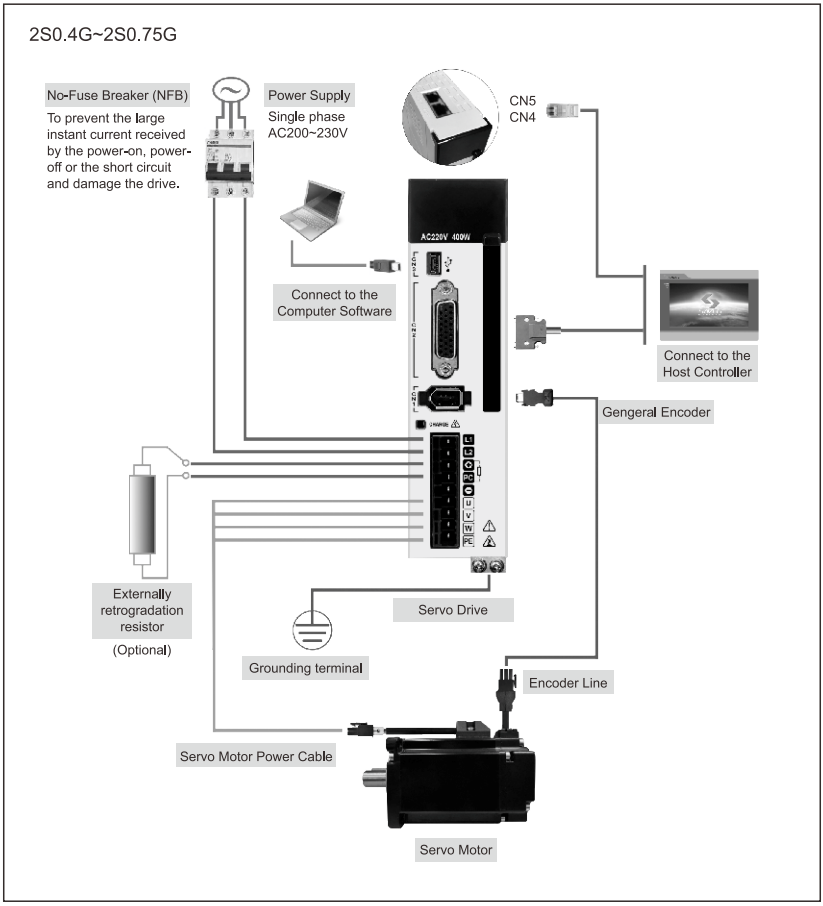

Installation Notes:

1. Check the L1, L2 power and connecting wire.
2. Check the servo motor output U, V, W terminal phase wires (Unable to run when the connection is wrong).
3. External connected regeneration resistor is the selective spare, adopt according to the actual needs.
4. The CHARGE indicator light keeps on, indicating that the main circuit is energized. Note that when the power is turned off, there is still voltage in the main circuit, and the wires can be disassembled and installed after the light is completely dimmed.